


TRUST SUPER TUNING SYSTEM AIMING AT REAL COMPETITIONS.

ELECTRONIC GAUGE

60mm & 52mm

TRUST

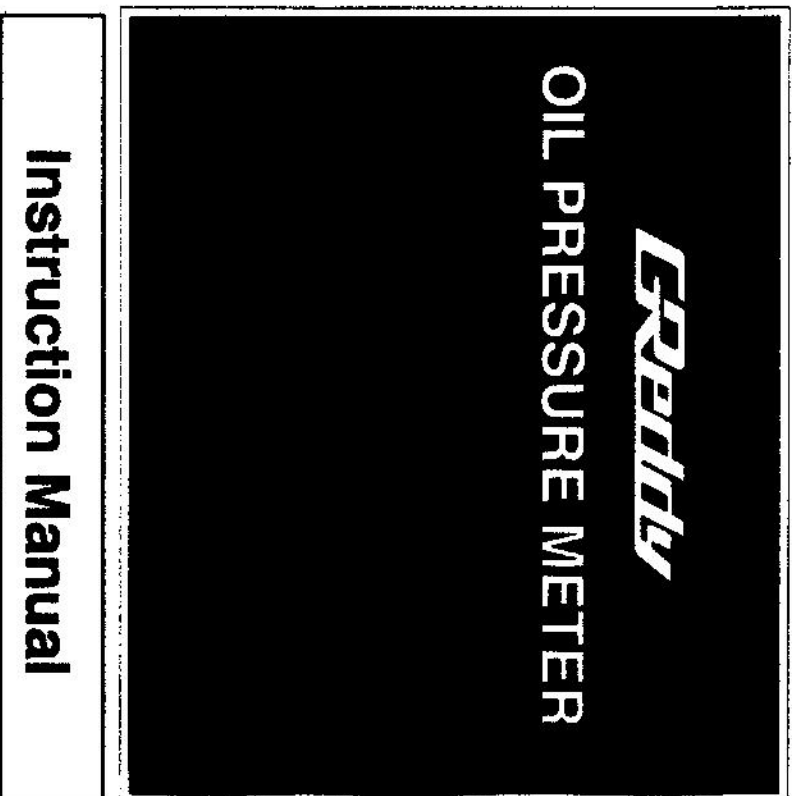

TRUST CO., LTD.

MADE IN JAPAN.

TRUST

INSTALLATION


OPTION 1.

Sensor Installation
(Factory Oil Pressure Replacement)

CAUTION

Avoid mounting the sensor in a location where it could get wet or hot.

Make sure the sensor and sensor harness is away from the ignition system. (i.e. ignition coil box) Noise (signal) from the ignition system may cause the meter to display faulty readings.

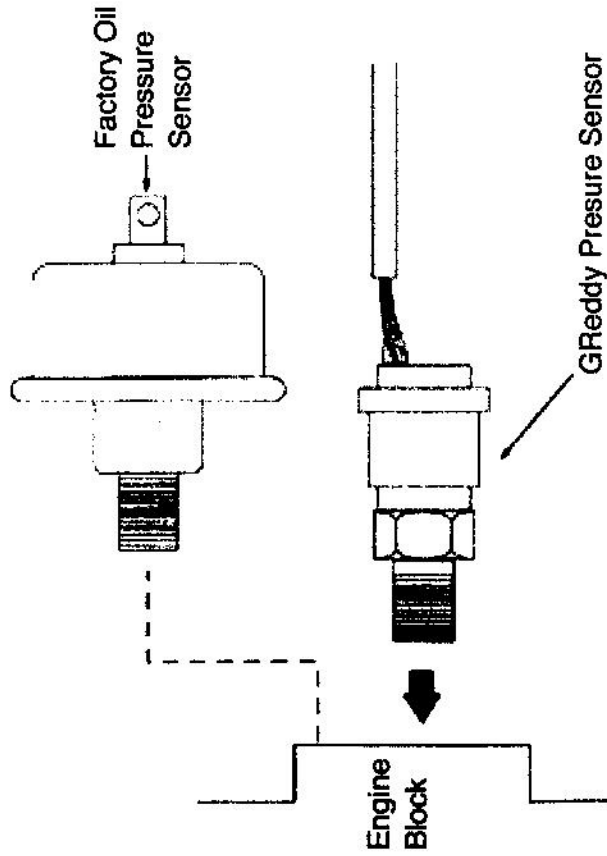


During Installation, make sure to use Teflon tape to prevent oil leaks. Oil leaks can cause engine damage.

3.

INSTALLATION

OPTION 2.

Sensor Installation
(Using a GREX sensor attachment)


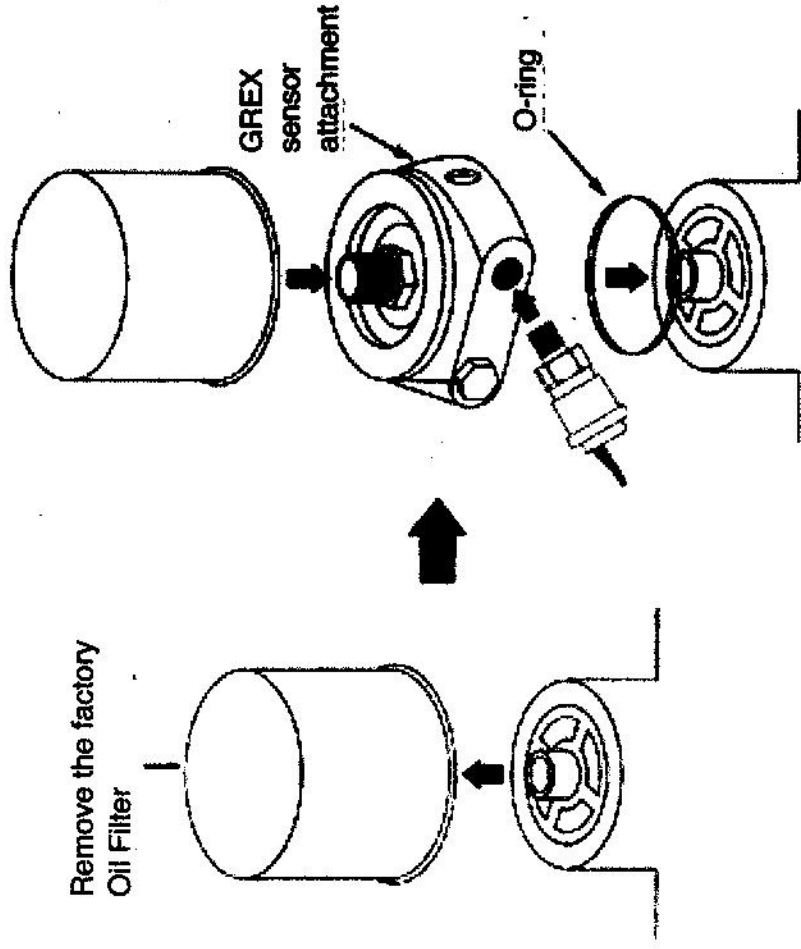


IMPORTANT


If you are using a GREX oil cooler kit, the pressure sensor can be directly installed to the oil block adapter, of the oil cooler kit.

4.


ATTENTION
 During installation, make sure to use Teflon tape to prevent fuel leaks. Fuel leaks could cause fires and engine damage.

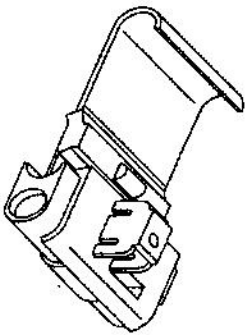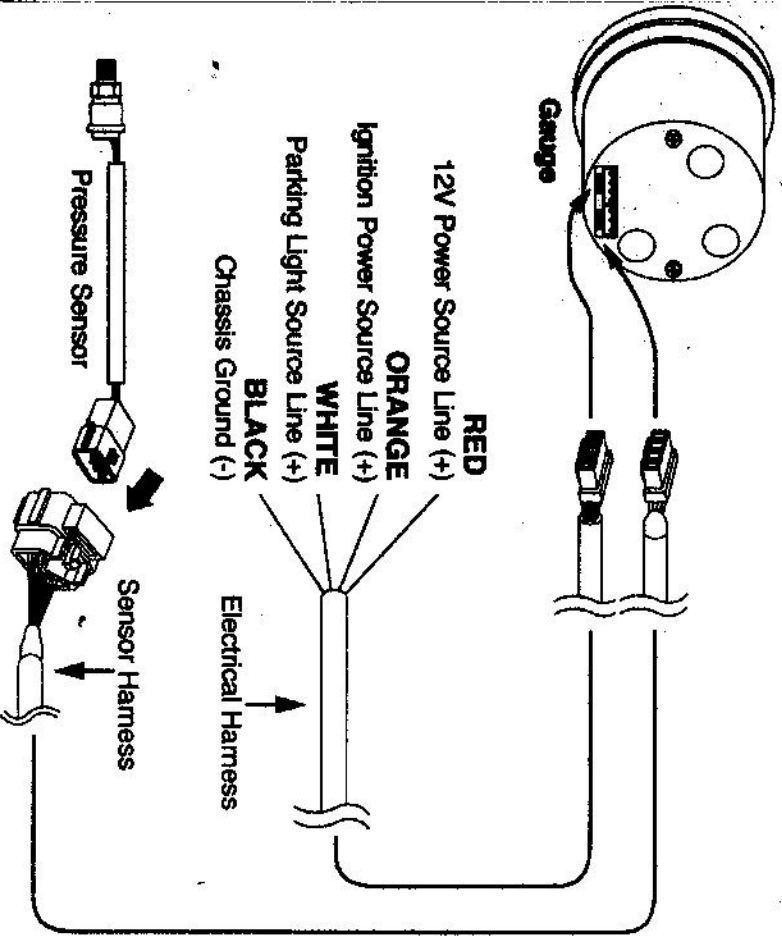

Electrical Tap
1pc.

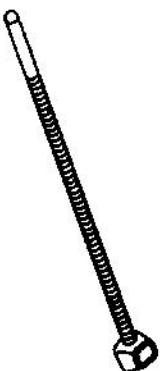


Wire Tie 15cm
1pc.

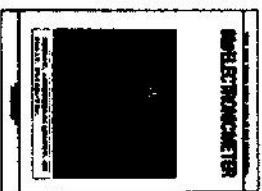


Instruction Manual

Required Tools for Installation


Tools for basic installation	Tools for professional installation
Tester (min. 15v tester) Pliers Cutters +, - Screwdrivers 10mm, 12mm, 14mm, 17mm Wrenches	Hose clamps Solder, Soldering Iron Drill, and Drill bits Cleaner and Rags Electrical Tape Teflon Tape

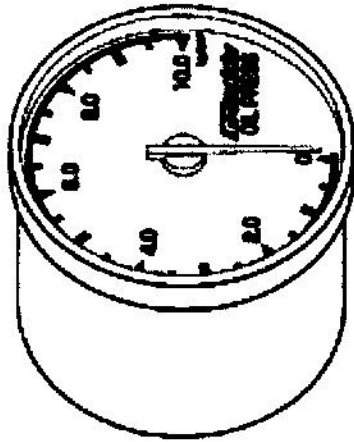


Oil Pressure Gauge
1pc.

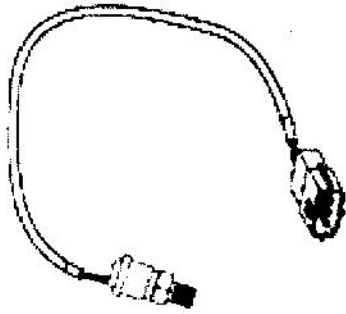

Oil Pressure Sensor
1pc.

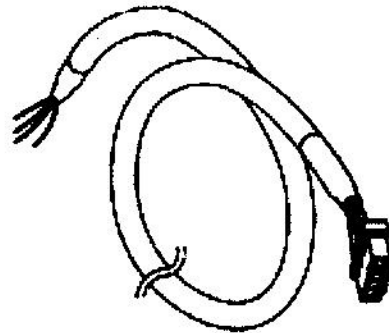

Electrical Harness
1pc.

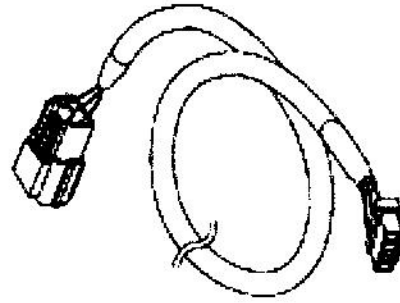

Sensor Harness
1pc.


IMPORTANT

When locking for a location to mount the meter, be sure not to have the meter interfere with the driver's view of the road or other important instruments.

NOTE

Mounting brackets for the meters are available for simple installation

CAUTION

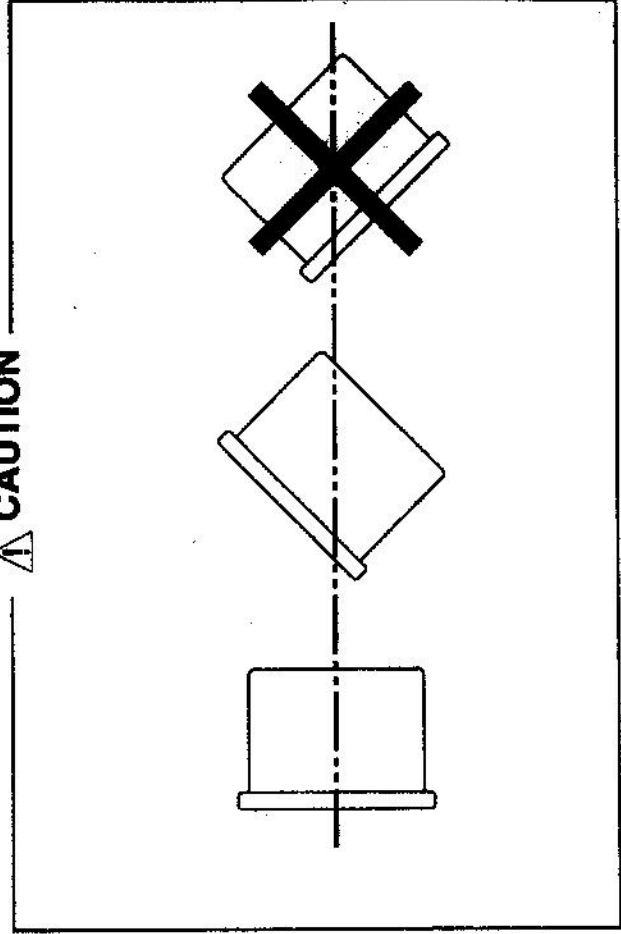


BULB REPLACEMENT

Replacing the Illumination Bulb:

When the illumination bulb goes out, replacements can be purchased through an Authorized GReddy Dealer.

Removing the Illumination Bulb

1. Disconnect the negative terminal of the vehicle's battery
2. Remove the gauge from it's mounted position.
3. Remove the illumination bulb seals
4. Use a screw driver to carefully turn the illumination bulb 45 degrees, then pop out the bulb.

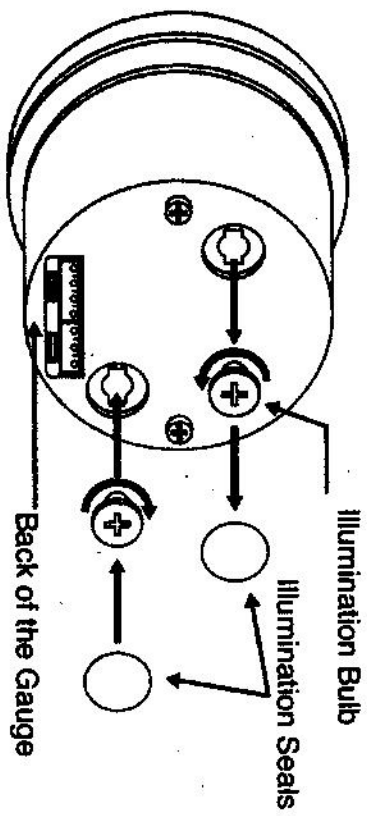

Installing the replacement Bulb

To install reverse the removal instructions listed above.

Note:

To prevent any shortages, always reseal the illumination bulbs with the illumination seal or electrical tape.