## GReddy Performance Products, Inc.

# GPP Front Lip Spoiler

## 2017-2018 HONDA Civic SI Coupe (FC3) & Sedan (FC1)

## Installation Manual

Please read the entire manual before installing this kit.



#### Parts List

1.	GPP Front Lip Spoiler (Carbon / FRP)	1
2.	Self tapping screws	15
3.	M5 x 1.0 15mm bolt with nut and washers	15

#### TOOL NEEDED

- Philips screwdriver
- 5mm drill bit with power drill
- 8mm wrench and socket wrench


### INSTALLATION

Caution: When removing stock parts, make sure you read the factory repair manual for proper procedures.

- 1. Remove the factory front bumper
- 2. Test fit the front lip spoiler to the factory bumper.
- 3. Line up the lip so that the both ends are aligned with the bottom corner edge of the factory bumper.



4. By using the provided self-tapping screws, secure the back corner of each end first and work your way forward.

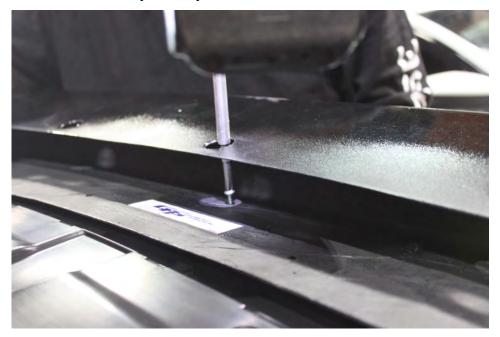

5. Once all the screws are in, remove the lip once. Drill out the holes that were made by the self-tapping screws with 5mm bit.



6. Secure the lip spoiler with provided 5mm bolts and nuts. Push the bolts through the bumper with washer and use the nuts on the bottom side of the lip spoiler.



7. Finally reinstall bumper with lip. Then install provided emblem





\* **NOTE**: GPP FC1/FC3 Front Lip Spoiler (17550100 / 17550101) may also fit FK7 Civic Sport by replacing the factory Honda lower center grill [part # 71102-TGG-A00]

